



ELECTROFUSION FIBERGLASS ENTRY BOOT

UPP® Electrofusion Fiberglass Entry Boots provide a seamless connection between UPP® single wall and double wall semi-rigid pipework and fiberglass containment sumps.

HIGHLIGHTS

- Available in 2", 3", and 4" models for use with UPP® brand secondary contained pipework systems.
- Designed for use on single and double wall containment sumps, provided the wall thickness does not exceed the maximum thread width of each entry seal listed under the specifications tab (Not recommended for curved sump surfaces).
- Allows for electrofusion welding of secondary contained pipework directly to boot.
- Polyethylene sleeve is over-molded onto a center section with multiple dovetail grooves tying the two materials together to create a watertight joint.




SPECIFICATIONS

Installation

The boot's flanges are bonded to the fiberglass sump wall with the adhesive kit (sold separately), creating a solid connection between the boot and sump wall. The flanges are then covered with adhesive. Once properly installed, the boot is fully vacuum and pressure testable.

Components

- | | |
|--------------------------------|----------------------------|
| 1 Polyethylene sleeve | 4 Compression disk (fixed) |
| 2 Threads | 5 Fiberglass sump wall |
| 3 Compression disk (threading) | 6 Maximum thread width |

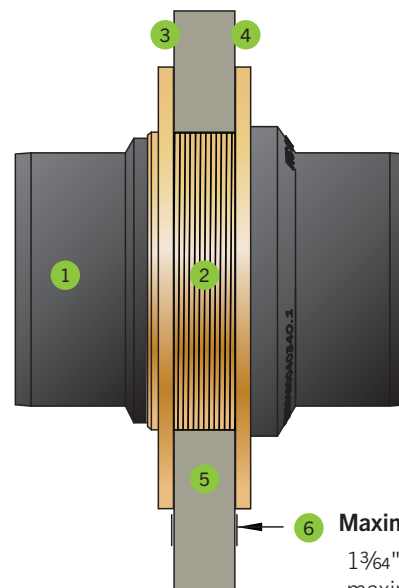


Maximum Thread Width
1 $\frac{3}{64}$ " (26.5 mm) is the maximum width of the fiberglass sump wall the entry boot can accommodate.

SPECIFICATIONS CONTINUED


2" Electrofusion Fiberglass Entry Boot

For use with 2" UPP® pipework.

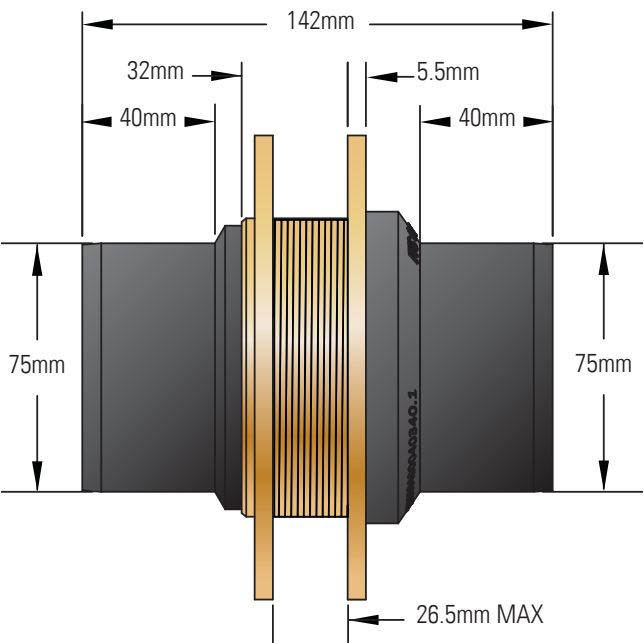


3" Electrofusion Fiberglass Entry Boot

For use with 3" UPP® pipework.

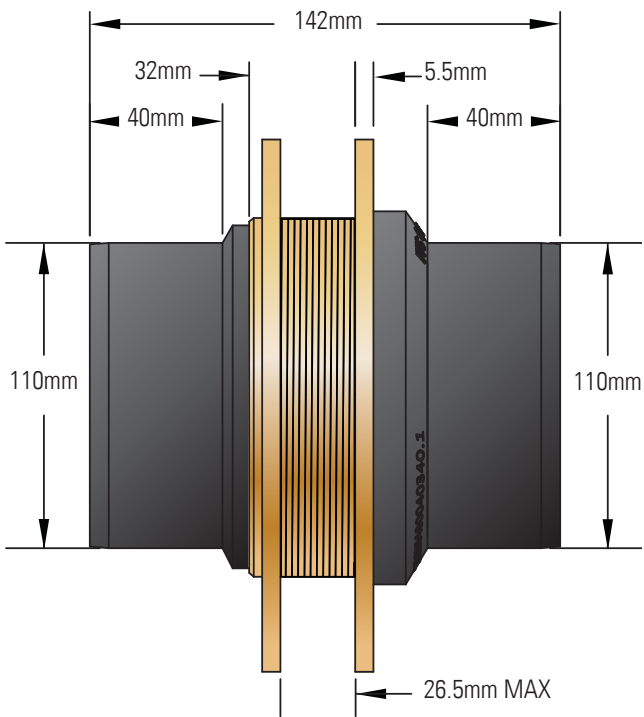

4" Electrofusion Fiberglass Entry Boot

For use with 4" UPP® pipework.

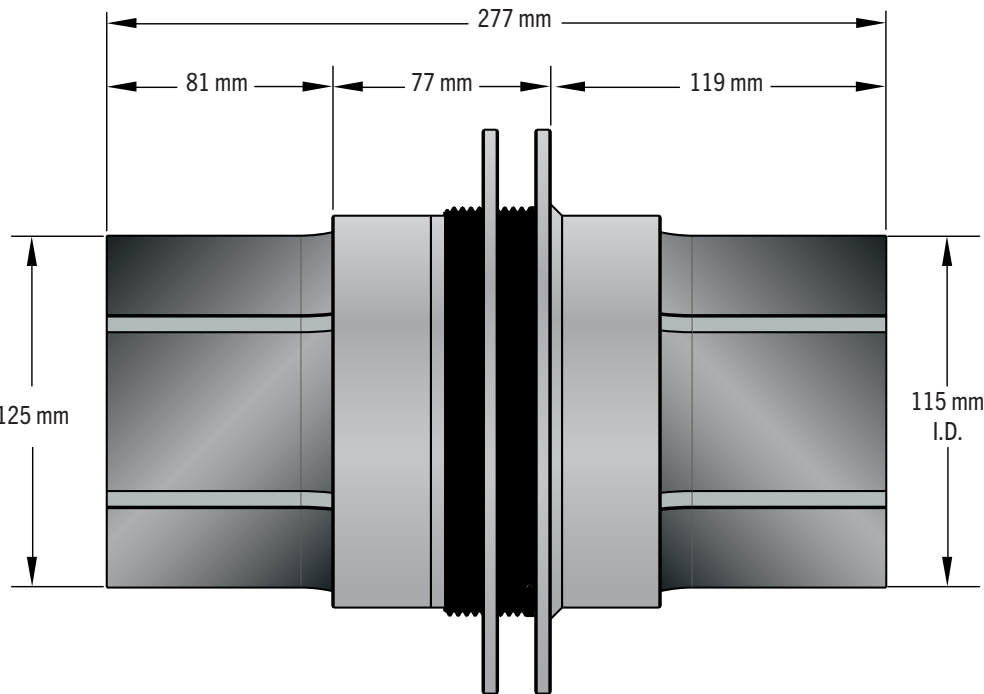

ORDER INFORMATION

Electrofusion Fiberglass Entry Boots

Additional Electrofusion fittings are required to complete the installation of these boots. See the Electrofusion Fiberglass Entry Boot Ordering Guide below for details.

	Model	Description
	FEB-075-M	2" Electrofusion Fiberglass Entry Boot, for use with 2" pipework
	FEB-110-M	3" Electrofusion Fiberglass Entry Boot, for use with 3" pipework
	FEB-125-MM	4" Electrofusion Fiberglass Entry Boot, for use with 4" pipework
	1137205	Adhesive Kit (50 ML cartridge w/ nozzle)


Note: Order (1) Adhesive Kit per boot.

Pipe Slope Wedges

Pipe Slope Wedges (sold in pairs of 2) are for use in applications where continuation of the pipe slope is required through the sump wall to the tank access point.

	Model	Description
	10000009091	1/4" Pipe Slope Wedge (2), for use with 2" Electrofusion Fiberglass Entry Boots
	10000009092	3/8" Pipe Slope Wedge (2), for use with 2" Electrofusion Fiberglass Entry Boots
	10000009093	1/4" Pipe Slope Wedge (2), for use with 3" Electrofusion Fiberglass Entry Boots
	10000009094	3/8" Pipe Slope Wedge (2), for use with 3" Electrofusion Fiberglass Entry Boots


1½" Secondary Contained Fiberglass Sump Entry Fittings

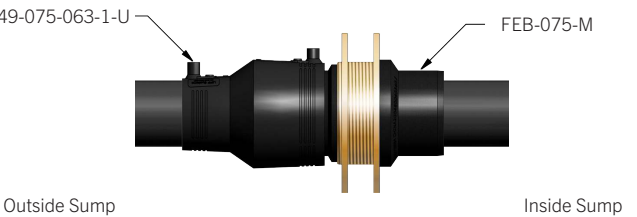

2" Primary Fiberglass Sump Entry Fittings




2" Secondary Contained Fiberglass Sump Entry Fittings

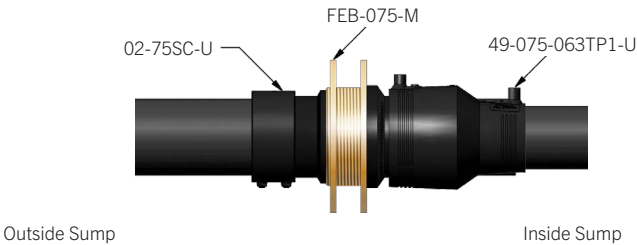

3" Primary Fiberglass Sump Entry Fittings



3" Secondary Contained Fiberglass Sump Entry Fittings

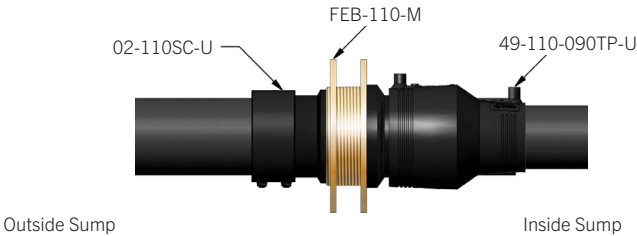

4" Double Wall Fiberglass Sump Entry Fittings

